



Manual for Gregory Hall Room123




BluRay- Dvd Player/VHS
Player Location - in the
podium below the keyboard
drawer.



If the system is not working correctly reboot the entire system by turning off the console and turning it back on.

1. Turn on the display
2. Turn off the display
3. Adjust the volume - This will adjust the volume for all the devices in use.
4. Mute the display - This hides the projector display but not on the computer
5. Unmute the display - Turns off the "display mute"
6. Mute - temporarily mute all audio
7. Mac - displays the Mac Mini on the display
- 8-9. HDMI/VGA - displays a device that is plugged into those ports.
- 10-11. Blu-Ray/VCR - displays the respective device.
12. HDMI and VGA port

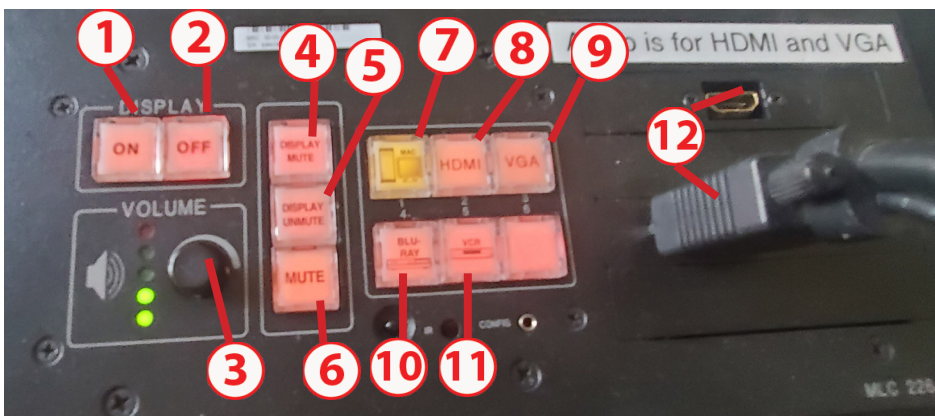

Please, remember to shut down the system and press DISPLAY OFF when finished.